

GOOD OPERATING PRACTICES

Desinfection Recommendations

(desinfection of the system between change of operator is recommended)



Applies to all Coherent Manual Welders

Method #1

- Spray Desinfectant



Method #2

- Wipe with moist desinfection tissue
Don't spray



Please make sure you use certified desinfectant designed for surface desinfection

- We recommend Ethanol based surface desinfectant*

Main Points of Contact:


- Microscope
- Touch Display
- Hand-Inlets



Axes Chuck



Parameter Joysticks

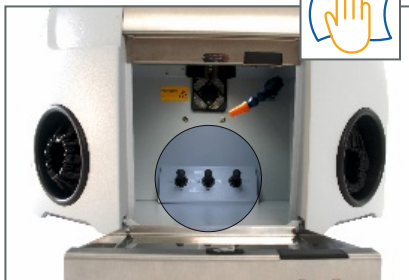

Axes Joystick



* Disclaimer:

Our systems had been tested to withstand desinfection by use of Ethanol based solvent („Sonett Flächendesinfektion“ <https://www.sonett.eu/produkte-shop/desinfizieren/flaechendesinfektion/>). Nevertheless we strongly recommend to test the actually used solvent. Material might show discoloration or bleaching. Especially hand inlets might bleed black colour if used while still moist. Apply desinfectant according suppliers recommendation to ensure proper desinfection.